





## Instrução de Instalação da Fonte Nobreak Inner Net II

Instrucción de instalación de la Fuente Nobreak Inner Net II (ESP)

Inner Net II Nobreak Installation Instruction (ENG)

Instruction d'installation de le Nobreak Inner Net II (FRA)

### 1 Identificação/ Identificación/ Identification/ Identification

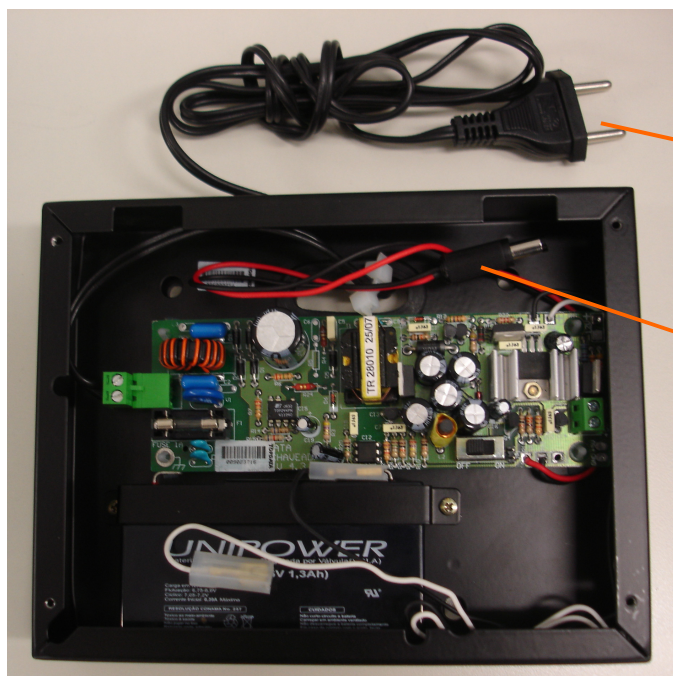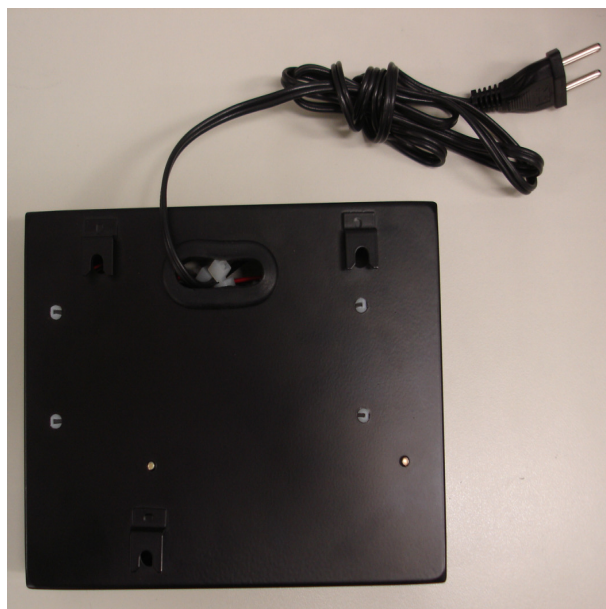

**Cabo de Força**  
Cabo de Fuerza(ESP)  
Power Supply Cable(ENG)  
Câble d'Alimentation(FRA)

**Cabo de Alimentação Inner Net II**  
Cable de Alimentación Inner Net II (ESP)  
Inner Net II Power Output Cable(ENG)  
Câble d'Alimentation de le Inner Net II (FRA)

### Nobreak Inner Net II



Nobreak Inner Net II (ESP)

Inner Net II Nobreak (ENG)



Nobreak Inner Net II (FRA)



## 2 Instrução / Instrucción / Instruction / Instruction

Passos (ESP) Pasos (ENG) Steps (FRA) Pas	Todos os modelos (ESP) Todos los modelos (ENG) All models (FRA) Tous les modeles
1	<p>Retire os 4 parafusos utilizando uma Chave Philips e abra o Nobreak. (ESP) Retira los 4 tornillos con un destornillador Philipe y abra lo Nobreak (ENG) Open the Nobreak unscrewing the 4 screws using a Philips screw driver (FRA) Retire les 4 vis avec un tournevis Philips et ouvre le Nobreak</p> 
2	<p>Conecte o cabo branco na Bateria (ESP) Conectas lo cable Blanco en la batería. (ENG) Connect the white cable in the battery. (FRA) Connecte le câble blanc en le batterie.</p> 

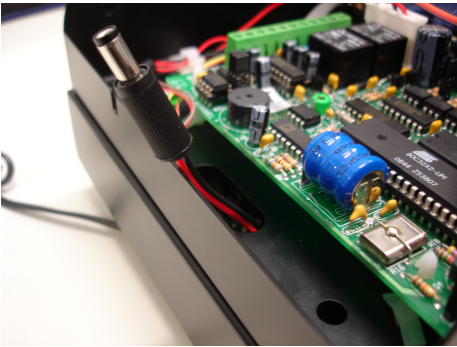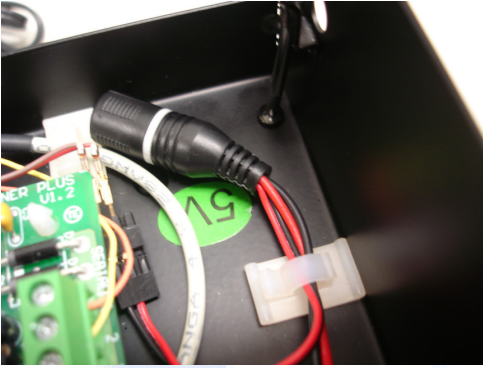

3	<p>Puxe o cabo de alimentação do Inner Net II para dentro do Inner. (ESP) Pone el cable de alimentación Inner Net II dentro de el Inner (ENG) Put the Inner Net II power output cable inside the Inner (FRA) Poser le câble d'alimentation de le Inner Net II dans le Inner</p> 
4	<p>Parafuse o Inner Net II sobre o Nobreak, usando os 4 parafusos retirados no passo 1. (ESP) Retira los 4 tornillos con un destornillador Philipe y abra lo Nobreak (ENG) Open the Nobreak unscrewing the 4 screws using a Philips screw driver (FRA) Retire les 4 vis avec un tournevis Philips et ouvre le Nobreak</p> 
5	<p>Conecte o cabo de Alimentação Inner Net II (ESP) Conectas el cable de Alimentación Inner Net II (ENG) Connect the Inner Net II Power Output Cable (FRA) Connecte le câble d'Alimentation de le Inner Net II</p> 